



Step-by-step Installation Guide

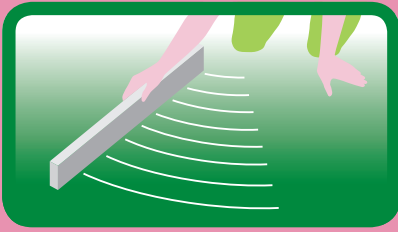

1 CLEAR THE AREA, COMPACT AND LEVEL THE BASE.




2 LAY THE LINK EDGE DOWN IN THE APPROXIMATE AREA YOU REQUIRE IT TO BE.

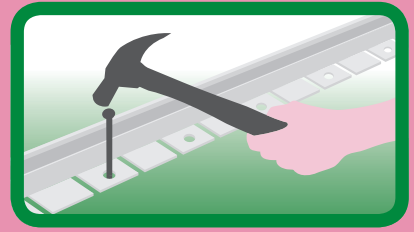


3 HALF HAMMER SPIKES INTO PRE PUNCHED HOLES (APPROXIMATELY 4 SPIKES EVERY 3M LENGTH) STARTING FROM THE FIRST HOLE IN THE END OF THE LINK EDGE. USE SPIKE WASHERS PROVIDED.




4 HALF HAMMER SUBSEQUENT SPIKES IN PIVOTAL AREAS ALONG THE LENGTH. (ESPECIALLY AT POINTS WHERE A BEND OR CURVE IS REQUIRED)

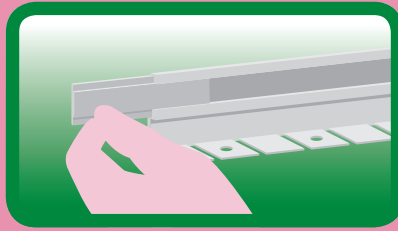

5 CONNECT ANY FURTHER 3M LENGTHS TOGETHER BY USING THE FISHPLATE CONNECTORS. SLIDE THE FISHPLATE CONNECTOR INTO THE DESIGNATED SECTION AT THE END OF THE MATCHING LENGTH.

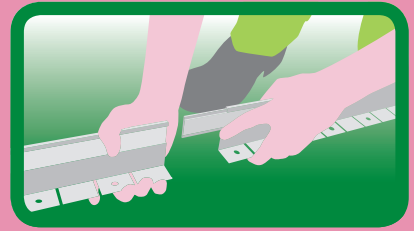


6 SNAP IT TOGETHER WITH THE SECOND LINK EDGE LENGTH ENABLING FOR AN UNINTERRUPTED CLEAR EDGE.

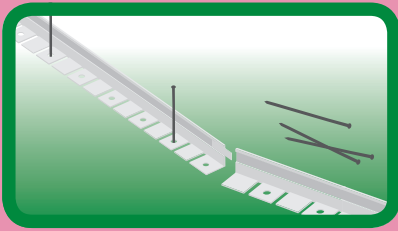

7 CHECK THAT THE POSITION OF THE LINK EDGE IS VISUALLY CORRECT. IF IT IS NOT, REMOVE THE SPIKES AND REPOSITION IT.




8 ONCE SATISFIED WITH THE POSITIONING OF THE LINK EDGE, HAMMER THE SPIKES FIRMLY INTO THE GROUND.

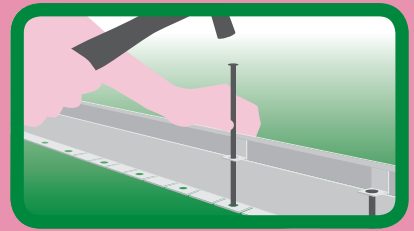

9 USE THE SPIKE GUIDE TO PROVIDE EXTRA VERTICAL STABILITY FOR THE LINK EDGE WHEN THERE IS HEAVIER TRAFFIC & HEAVIER COMPACTED AREAS. ENSURE EDGE SPIKE HOLE IS TOWARDS THE BOTTOM OF THE SPIKE GUIDE.



10 FILL EACH SIDE OF THE LINK EDGE WITH THE DESIRED SURFACE.

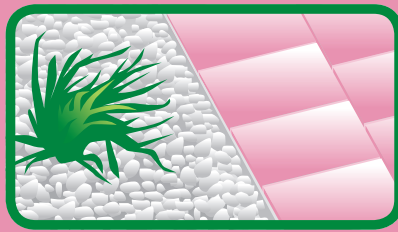

11 ENJOY YOUR NEW LANDSCAPED AREA.

Get the Edge

**LINK
EDGE**

PATENT AND REGISTERED
DESIGN PROTECTION

Visit www.linkedge.com.au

Freecall **1800 454 657**

Email info@linkedge.com