



TREX JOIST & BEARER TAPE INSTALLATION

PREPARATION

- » Trex Protect Joist & Bearer Tape can be applied to horizontal and vertical surfaces including all joists, rim joists, bearers, steps, stair stringers, blocking, ledger board, under joists hangers and other surfaces.
- » When pulling deck boards onto the deck, a piece of plywood or wafer board can be used to overhang the edge of the deck. This will prevent the product from rolling up and pulling up from the joist.

- » Trex Protect Tape has two widths making it convenient to apply to joists and double bearers.
 - Use 50 mm x 20 m Joist Tape for joists
 - 100 mm x 20 m Bearer Tape for double bearers
- **NOTE:** Trex Protect cannot be used to install Trex RainEscape

INSTRUCTIONS

STEP 1


» Clean the timber surface making sure it is dry and free of any debris.


STEP 2


 Remove the backing while applying the tape directly to the surface.
Run your hand over the tape and firmly press it on to the timber surface.

STEP 3

» After covering the timber surface and bearers with tape, cut the tape to length with a utility knife or scissors.

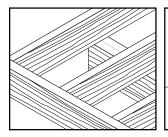



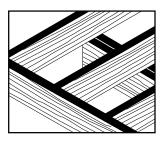

For more information, visit trexprotect.com/au

© 2022 Trex Company, Inc. All rights reserved. Trex* RainEscape* products are manufactured and sold by IBP, LLC under a Trademark License Agreement with Trex Company, Inc. RainEscape* is a federally registered trademark of IBP, LLC.